


STEIN

QuickTile Channel Drain INSTRUCTIONS

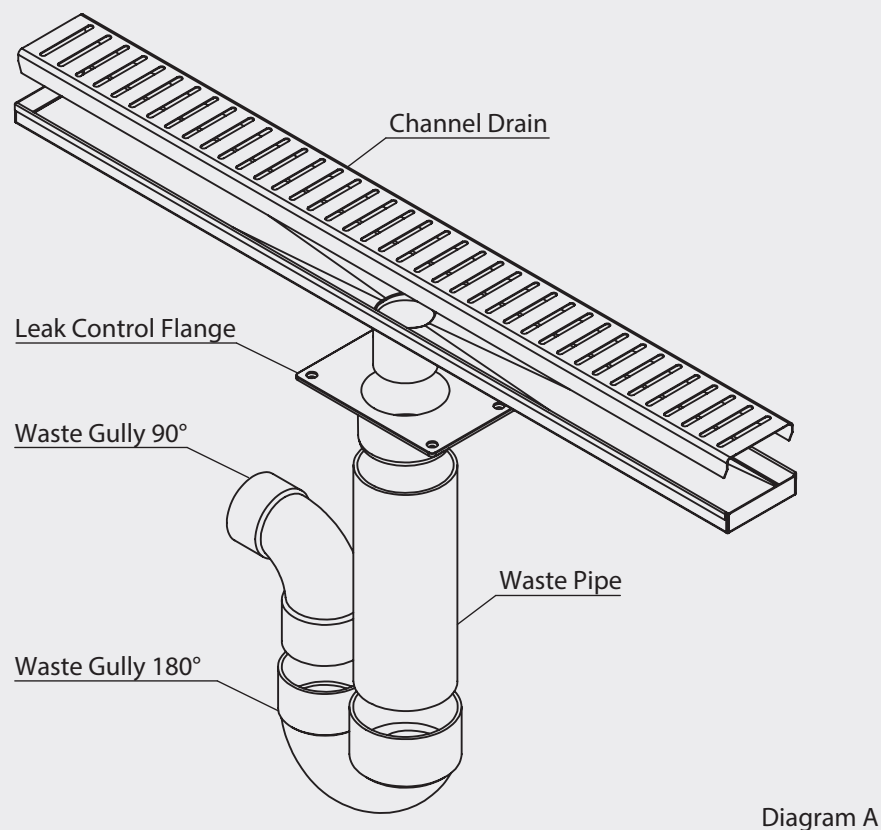


Leak Control Flange:

- Bonded / sealed on the underside with silicone.
- Screwed down with countersunk screws (not supplied).

STEIN

QuickTile Channel Drain INSTRUCTIONS

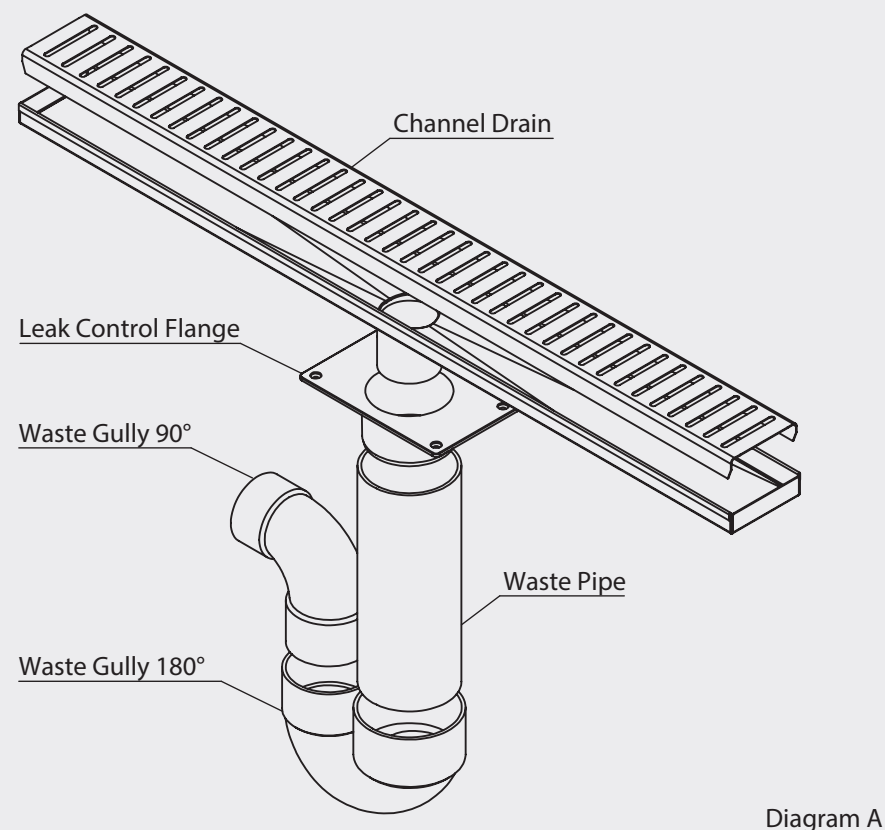


Leak Control Flange:

- Bonded / sealed on the underside with silicone.
- Screwed down with countersunk screws (not supplied)

STEIN RECOMMENDS A SKILLED TRADESMAN ACQUAINTED WITH SHOWER INSTALLATIONS IS USED TO ENSURE THE VERY BEST OUTCOME.

Diagram B

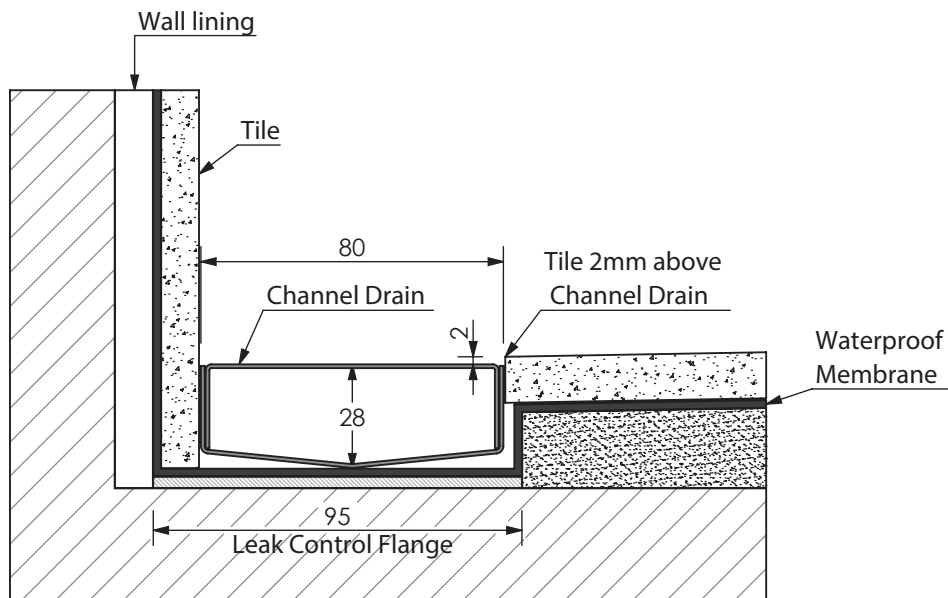

Important:

- The floor tiles must be 2mm proud of the Channel Drain as per diagram.
- You will need to calculate how deep the floor is formed, based on the tile thickness.
- Please note the Channel Drain is 28mm thick and the Leak Control Flange is 3mm thick.
- The fall on the floor and the waterproofing must meet the New Zealand building code.


CONTACT

STEIN

Freephone: 0800 002 299 **Phone:** 07 928 9990 **Fax:** 07 928 9999
Email: info@stein.co.nz **www.stein.co.nz**

STEIN RECOMMENDS A SKILLED TRADESMAN ACQUAINTED WITH SHOWER INSTALLATIONS IS USED TO ENSURE THE VERY BEST OUTCOME.

Diagram B

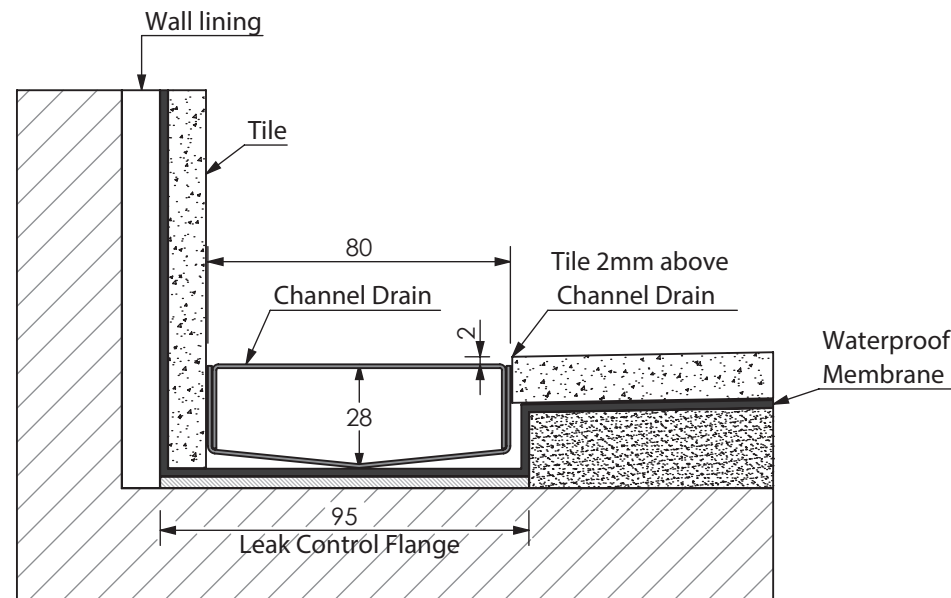

Important:

- The floor tiles must be 2mm proud of the Channel Drain as per diagram.
- You will need to calculate how deep the floor is formed, based on the tile thickness.
- Please note the Channel Drain is 28mm thick and the Leak Control Flange is 3mm thick.
- The fall on the floor and the waterproofing must meet the New Zealand building code.

CONTACT

STEIN

Freephone: 0800 002 299 **Phone:** 07 928 9990 **Fax:** 07 928 9999
Email: info@stein.co.nz **www.stein.co.nz**