

MIRROR TILES

INSTALLATION INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE COMMENCING INSTALLATION

GENERAL INFORMATION

- When you receive your mirror tiles, please check that the type/size is correct and free of freight damage.
- Advise your supplier of Stein products of any fault within 12 hours of receiving goods.
- Any installation of incorrect or faulty product will invalidate later claims.

WARRANTY

- This covers product defects for 12 months but mirror tile breakage on site is not included.
- Installation must comply with instructions to be under warranty.

MIRROR TILE INSTALLATION

PREPARATION/DETAILING

- The wall must be flat and a suitable substrate.
- A fully cured painted wall is preferable so the silvered backing is protected from damage.
- Clean the wall with mild soap and water to remove any residues and rinse and dry.
- Wipe the back of the Tile to remove any dust etc.
- Set out position of Tiles with 2mm gap between. Use tape or a very soft pencil.

INSTALLATION

- Attach 5 self-adhesive squares inside the edge on each side of the tile.
- Remove the tape surface from the adhesive squares.
- Apply Selleys Mirror-Metal-Glass adhesive in three beads keeping away from the outside edge and the double-sided tape.



Note: Adhesive build must be sufficient to adhere to wall and allow the tape to be in contact to the wall also.

- Apply some masking tape where practicable as added hold until adhesive cures.
- If installing a large area of tiles, do this in stages to ensure control of the job.

MIRROR TILES NEED THE DOUBLE-SIDED TAPE AS A HOLD PLUS MASKING TAPE AS A TEMPORARY HOLD UNTIL ADHESIVE IS CURED SUFFICIENTLY.

MIRROR TILE INSTALL DRAWINGS

NOTE (Use only this adhesive): MIRROR-METAL-GLASS

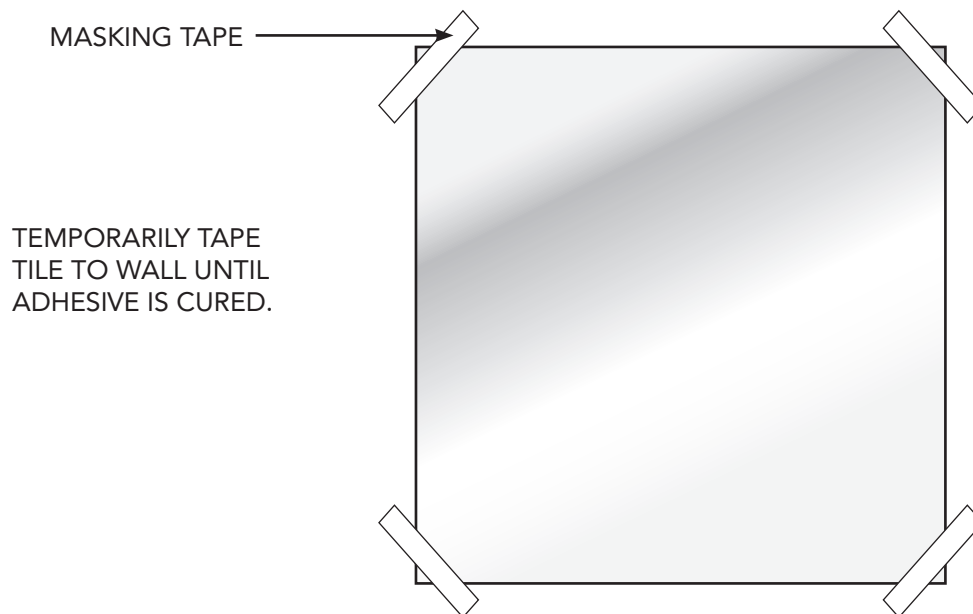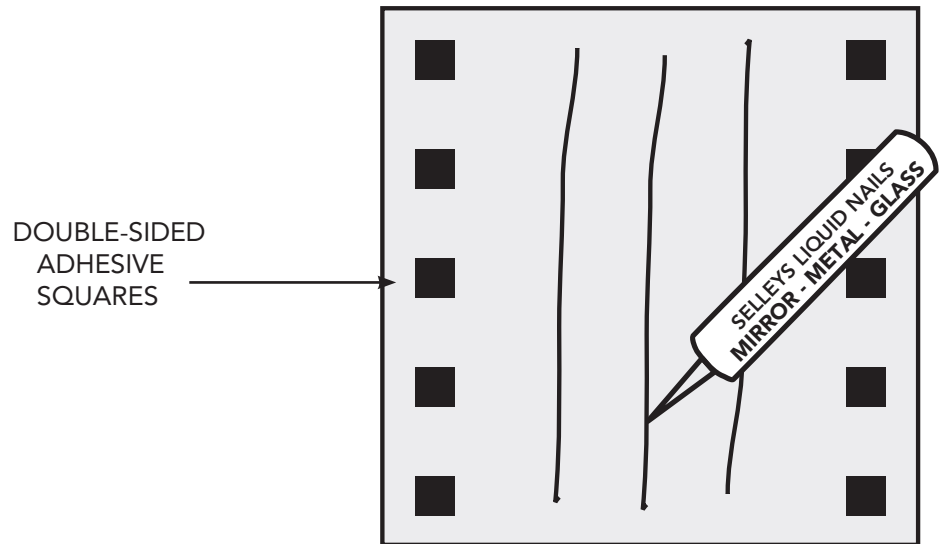

CONTACT

STEIN

54 Unutoto Place, Tauriko, Tauranga, 3171

Freephone: 0800 002 299

Phone: 07 928 9990

Email: info@stein.co.nz

stein.nz